



# WEB CONTROL PRODUCTS

User Manual



Cooling Enhancement Model XTB



Nexen Group, Inc. 560 Oak Grove Parkway Vadnais Heights, Minnesota 55127

ISO 9001 Certified



## TABLE OF CONTENTS

Introduction	. 1
Installation	1
Maintenance	. 1
Replacement Parts	· 2
Parts List	· 2
Warranties	. 3

## **INTRODUCTION**


Read this manual carefully, making full use of its explanations and instructions. The "Know How" of safe, continuous, trouble-free operation depends on the degree of your understanding of the system and your willingness to keep all components in proper operating condition. Pay particular attention to all NOTES, CAUTIONS, and WARNINGS to avoid the risk of personal injury or property damage. It is important to understand that these NOTES, CAUTIONS, and WARNINGS are not exhaustive. Nexen cannot possibly know or evaluate all conceivable methods in which service may be performed, or the possible hazardous consequences of each method. Accordingly, anyone who uses a procedure that is not recommended by Nexen must first satisfy themselves that neither their safety or the safety of the product will be jeopardized by the service method selected.


## INSTALLATION

- Using 10-24 x75 Locking Screws (Item 7) secure Blower (Item 1) to the Blower Adaptor (Item 4) (See Fig. 1).
- 2. Remove Guard from XTB Brake (See Fig. 1).
- 3. Align Blower and Blower Adaptor with the opening in front of the XTB Guard (See Fig. 1).
- Using 10-24 x 38 Socket Head Cap Screws (Item 6), Washers (Item 5), and Mounting Plate (Item 3) secure Blower and Blower Adaptor to the "XTB" Guard (See Fig. 1).
  - NOTE: The Mounting Plate (Item 3) has two different bolt patterns. Select the correct bolt pattern for the XTB Brake that the Cooling Enhancement is being mounted on (See Fig. 2).
- 5. Install Guard with XTB Cooling Enhancement onto XTB Brake.
- 6. Connect the two Electrical Leads for the Blower to a 110 volt, 60 Hz Power Supply.

## WARNING


The Blower Motor must be grounded.

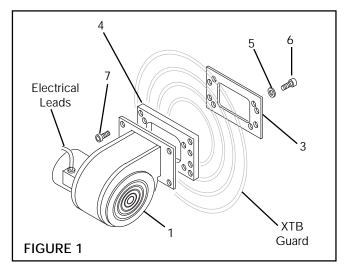

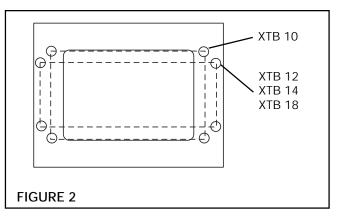

## MAINTENANCE

 - 1. Lubricate the Blower Motor every six months. Two lubrication access holes are located on the Blower Motor.
- 2. Check the Mounting Screws every six months, making sure that they are tightened securely.




## REPLACEMENT PARTS

The item or balloon number for all Nexen products is used for part identification on all product parts lists, product price lists, unit assembly drawings, bills of materials, and instruction manuals. When ordering replacement parts, specify model designation, item number, part description, and quantity. Purchase replacement parts through your local Nexen Distributor.

## PARTS LIST

ITEM	DESCRIPTION	ΩΤΥ
1	Blower	1
2	Blower Guard	1
3	Mounting Plate	1
4	Blower Adaptor	1
5	Washer	4
6	Socket Head Cap Screw (10-24 x .75)	4
7	Locking Screw (10-24 x .38)	4

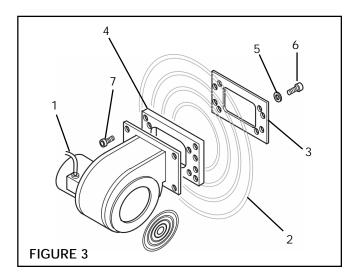



## WARRANTIES

#### **Warranties**

Nexen warrants that the Products will be free from any defects in material or workmanship for a period of 12 months from the date of shipment. NEXEN MAKES NO OTHER WARRANTY, EXPRESS OR IMPLIED, AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. This warranty applies only if (a) the Product has been installed, used and maintained in accordance with any applicable Nexen installation or maintenance manual for the Product; (b) the alleged defect is not attributable to normal wear and tear; (c) the Product has not been altered, misused or used for purposes other than those for which it was intended; and (d) Buyer has given written notice of the alleged defect to Nexen, and delivered the allegedly defective Product to Nexen, within one year of the date of shipment.

#### Exclusive Remedy

The exclusive remedy of the Buyer for any breach of the warranties set out above will be, at the sole discretion of Nexen, a repair or replacement with new, serviceably used or reconditioned Product, or issuance of credit in the amount of the purchase price paid to Nexen by the Buyer for the Products.

### Limitation of Nexen's Liability

TO THE EXTENT PERMITTED BY LAW NEXEN SHALL HAVE NO LIABILITY TO BUYER OR ANY OTHER PERSON FOR INCIDENTAL DAMAGES, SPECIAL DAMAGES, CONSEQUENTIAL DAMAGES OR OTHER DAMAGES OF ANY KIND OR NATURE WHATSOEVER, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHER BREACH OF CONTRACT, NEGLIGENCE OR OTHER TORT, OR OTHERWISE, EVEN IF NEXEN SHALL HAVE BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH POTENTIAL LOSS OR DAMAGE. For all of the purposes hereof, the term "consequential damages" shall include lost profits, penalties, delay images, liquidated damages or other damages and liabilities which Buyer shall be obligated to pay or which Buyer may incur based upon, related to or arising out of its contracts with its customers or other third parties. In no event shall Nexen be liable for any amount of damages in excess of amounts paid by Buyer for Products or services as to which a breach of contract has been determined to exist. The parties expressly agree that the price for the Products and the services was determined in consideration of the limitation on damages set forth herein and such limitation has been specifically bargained for and constitutes an agreed allocation of risk which shall survive the determination of any court of competent jurisdiction that any remedy herein fails of its essential purpose.

#### Limitation of Damages

In no event shall Nexen be liable for any consequential, indirect, incidental, or special damages of any nature whatsoever, including without limitation, lost profits arising from the sale or use of the Products.

#### Warranty Claim Procedures

To make a claim under this warranty, the claimant must give written notice of the alleged defect to whom the Product was purchased from and deliver the Product to same within one year of the date on which the alleged defect first became apparent.



Nexen Group, Inc. 560 Oak Grove Parkway Vadnais Heights, MN 55127 800.843.7445 Fax: 651.286.1099 www.nexengroup.com

ISO 9001 Certified